

Installation Instructions


TELEHOOK[®]

Cable Manager


IMPORTANT NOTES

- It is recommended that your display be installed prior to the installation of this product.
- If you wish to paint your Cable Manager, please consult your paint specialist for advice.
- Surface finish: Clear Anodised Aluminium

Component Checklist (Check you have received all parts against the Component Checklist below)

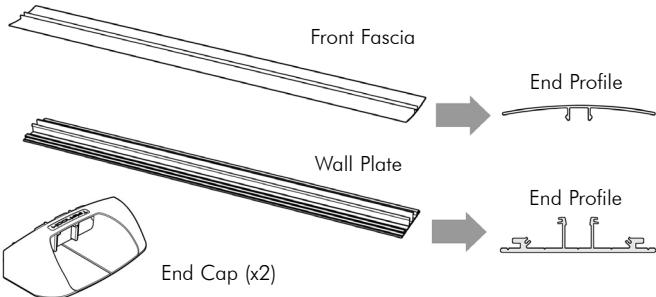


Bits Box

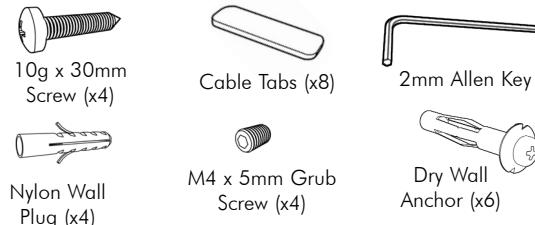


Tools Required: • Power drill • 4mm (3/16") drill bit • 6mm (1/4") drill bit • Phillips head screwdriver

A Mount the Wall Plate


Timber Stud Wall

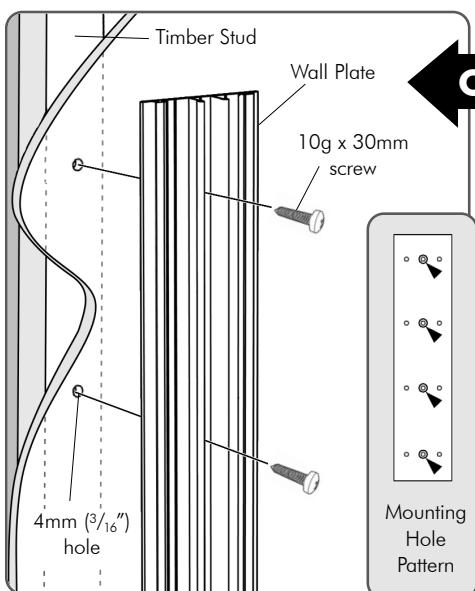

Masonry

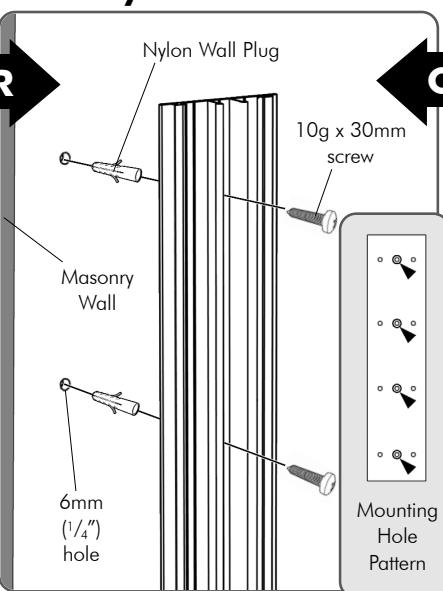

Dry Wall

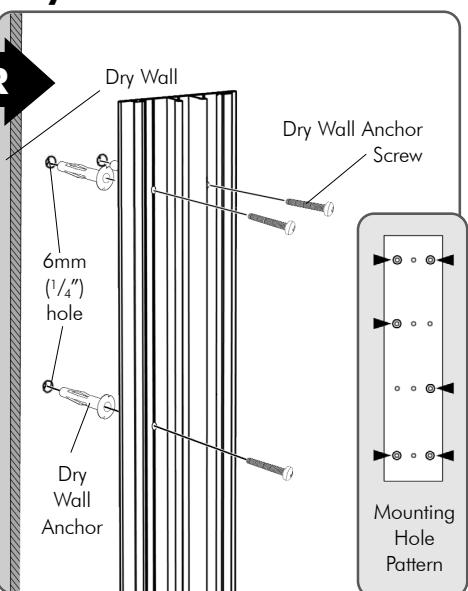

To determine the best position for your Cable Manager, see "Mounting Tips" below


IMPORTANT: Ensure the lower edge of the Wall Plate is positioned no less than 50mm (2") above the skirting board so that there is enough room to accommodate the End Cap

IMPORTANT: For Dry Wall Installation use alternating mounting holes

Mounting Tips:

Telehook Cable Manager has been designed to hide the cables of a wall mounted display. Therefore, it is recommended that it is mounted vertically and centrally below your display. The adjoining image shows a typical Cable Manager installation.


Ideally, the top of Telehook Cable Manager should sit just under the lower edge of your display with the bottom of Telehook Cable Manager (i.e. the End Cap) sitting approximately 50mm (2") above the floor or skirting board.

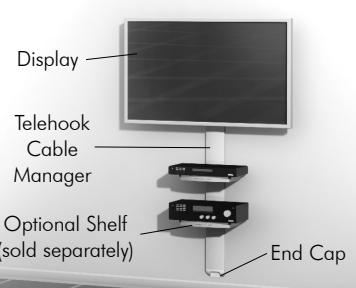

B Mount your Display

- Mount your display onto its wall mount bracket
- Connect all the required cables to the display and if necessary, manoeuvre it into its final viewing position


C Installing Cables

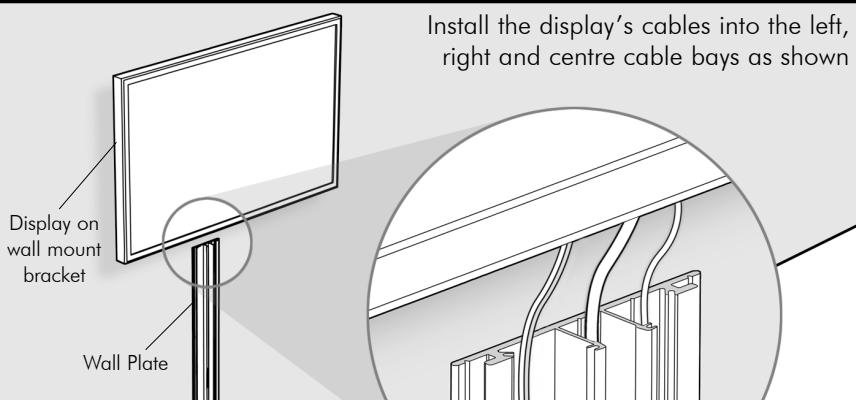


NOTE:

If possible, separate the display's power cable from the data cables (i.e. hi-fi & speaker cables) by installing them into separate cable bays. This will reduce the chance of electromagnetic interference. The diagram to the right shows an example installation setup.


Install the display's cables into the left, right and centre cable bays as shown

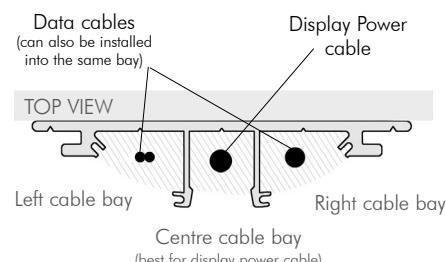


D Insert Cable Clips

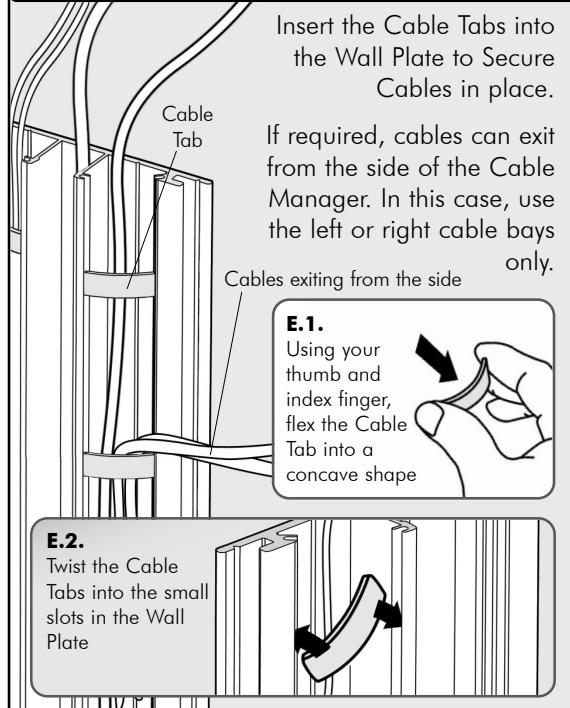

E Attach End Caps

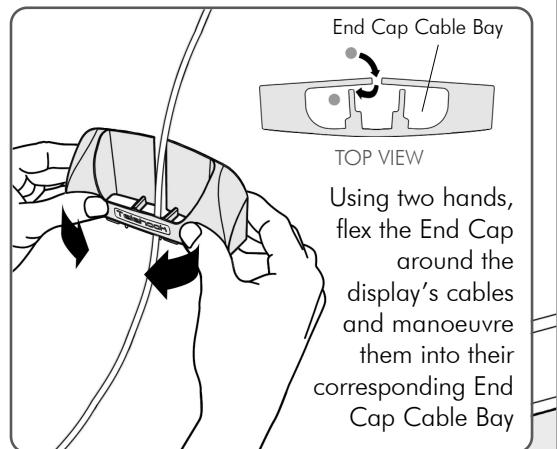

End Cap Cable Bay
TOP VIEW
Using two hands, flex the End Cap around the display's cables and manoeuvre them into their corresponding End Cap Cable Bay

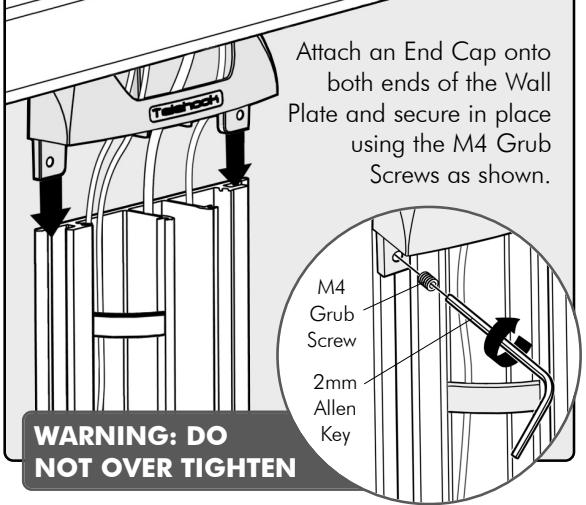


WARNING: DO NOT OVER TIGHTEN

Attach an End Cap onto both ends of the Wall Plate and secure in place using the M4 Grub Screws as shown.


M4 Grub Screw
2mm Allen Key

F Insert Front Fascia

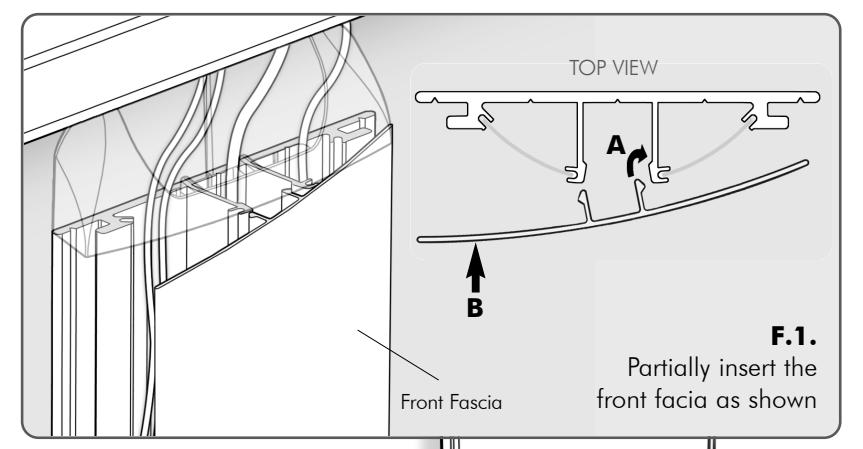

TOP VIEW

F.1. Partially insert the front fascia as shown

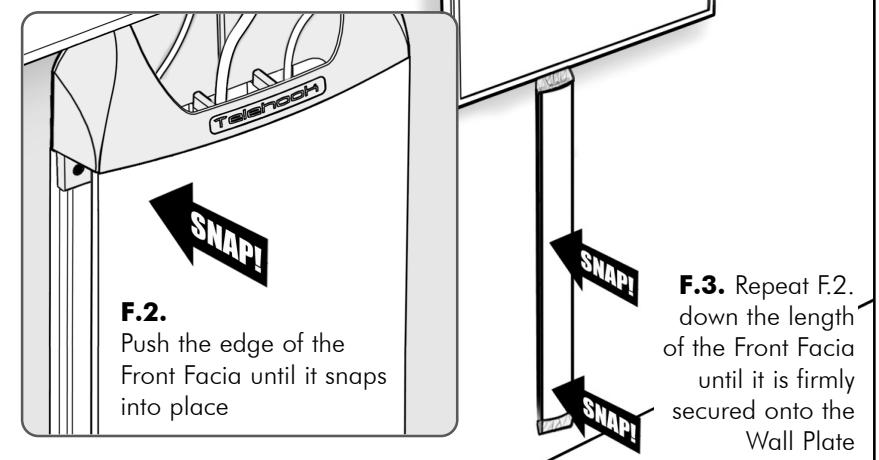

F.2. Push the edge of the Front Fascia until it snaps into place

F.3. Repeat F.2. down the length of the Front Fascia until it is firmly secured onto the Wall Plate

Installation Complete

atdec
the visual display mounting company